


USER'S MANUAL

LYNX-MIX USB SERIES


**12/16/20/24-CH COMPACT INTEGRATED LIVE SOUND
MIXER WITH DIGITAL EFFECTS**

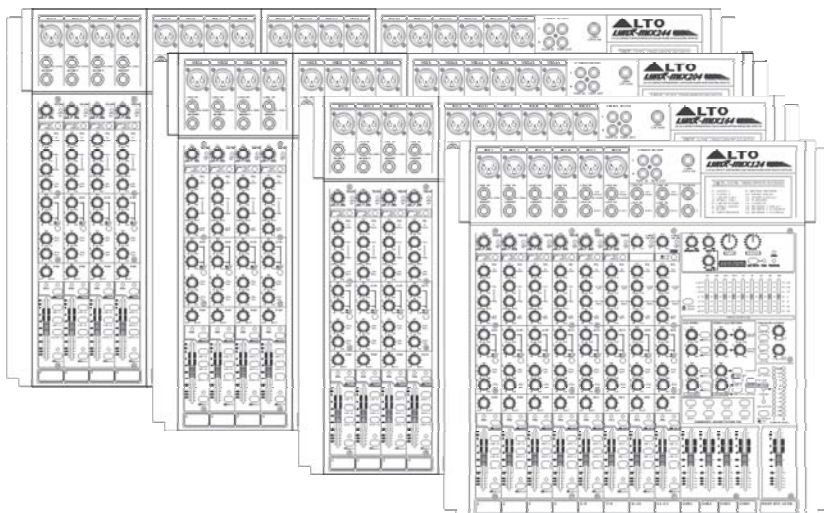


IMPORTANT SAFETY INSTRUCTION



TO REDUCE THE RISK OF ELECTRIC SHOCK PLEASE DO NOT REMOVE THE COVER OR THE BACK PANEL OF THIS EQUIPMENT. THERE ARE NO PARTS NEEDED BY USER INSIDE THE EQUIPMENT. FOR SERVICE, PLEASE CONTACT QUALIFIED SERVICE CENTERS.

 This symbol, wherever used, alerts you to the presence of un-insulated and dangerous voltages within the product enclosure. These are voltages that may be sufficient to constitute the risk of electric shock or death.


 This symbol, wherever used, alerts you to important operating and maintenance instructions. Please read.

- ⊕ Protective Ground Terminal
AC mains (Alternating Current)
- ⚡ Hazardous Live Terminal

ON: Denotes the product is turned on.
OFF: Denotes the product is turned off.

CAUTION

Describes precautions that should be observed to prevent damage to the product.


1. Read this Manual carefully before operation.
2. Keep this Manual in a safe place.
3. Be aware of all warnings reported with this symbol. 
4. Keep this Equipment away from water and moisture.
5. Clean it only with dry cloth. Do not use solvent or other chemicals.
6. Do not damp or cover any cooling opening. Install the equipment only in accordance with the Manufacturer's instructions.
7. Power Cords are designed for your safety. Do not remove Ground connections! If the plug does not fit your AC outlet, seek advice from a qualified electrician. Protect the power cord and plug from any physical stress to avoid risk of electric shock. Do not place heavy objects on the power cord. This could cause electric shock or fire.
8. Unplug this equipment when unused for long periods of time or during a storm.
9. Refer all service to qualified service personnel only. Do not perform any servicing other than those instructions contained within the User's Manual.
10. To prevent fire and damage to the product, use only the recommended fuse type as indicated in this manual. Do not short-circuit the fuse holder. Before replacing the fuse, make sure that the product is OFF and disconnected from the AC outlet.

WARNING

To reduce the risk of electric shock and fire, do not expose this equipment to moisture or rain.



Dispose of this product should not be placed in municipal waste and should be separate collection.

11. Move this Equipment only with a cart, stand, tripod, or bracket, specified by the manufacturer, or sold with the Equipment. When a cart is used, use caution when moving the cart / equipment combination to avoid possible injury from tip-over. 

12. Permanent hearing loss may be caused by exposure to extremely high noise levels. The US. Government's Occupational Safety and Health Administration (OSHA) has specified the permissible exposure to noise level. These are shown in the following chart:

HOURS X DAY SPL EXAMPLE

8	90	Small gig
6	92	train
4	95	Subway train
3	97	High level desktop monitors
2	100	Classic music concert
1,5	102	
1	105	
0,5	110	
0,25 or less	115	Rock concert

According to OSHA, an exposure to high SPL in excess of these limits may result in the loss of heat. To avoid the potential damage of heat, it is recommended that Personnel exposed to equipment capable of generating high SPL use hearing protection while such equipment is under operation.

The apparatus shall be connected to a mains socket outlet with a protective earthing connection.

The mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

IN THIS MANUAL

1. INTRODUCTION.....	1
2. FEATURES.....	1
3. QUICK START.....	6
4. CONTROL ELEMENTS.....	8
5. INSTALLATION & CONNECTION.....	19
6. PRESET LIST.....	22
7. BLOCK DIAGRAM.....	23
8. TECHNICAL SPECIFICATIONS.....	24
9. WARRANTY.....	26

1. INTRODUCTION

Thank you for purchasing the ▲LTO LYNX-MIX USB series compact integrated mixers, which are available for 12/16/20/24 channels. Your LYNX-MIX USB Series is a remarkable compact mixer that doesn't find many equals in the market today. With 6/10/14/18 MIC and 4 Stereo Line-level inputs for serious live performances. Your LYNX-MIX USB Series also includes a 24-bit digital multi-effect with 16 Factory Presets and 16 variations for every preset, for a total of 256 different digital effects. There is a 3-band EQ on mono input channels, 4-band EQ on stereo input channels. Use it for large GIGs, and for fixed PA installation.

Enjoy your LYNX-MIX USB Series and make sure to read this Manual carefully before operation!

2. FEATURES

6/10/14/18 MIC inputs with gold plated XLR and balanced TRS jack

4 Stereo input channels with balanced TRS jacks

Ultra-low noise discrete MIC preamps with +48 V Phantom Power

SUB1-2, SUB3-4 & MAIN L-R signal assignment switches

4 AUX Sends per channel: 2 PRE/POST faders switchable for monitoring application effects & sound processor input; 2 POST faders as external send or for internal digital DFX

3-band EQ with sweepable MID on mono inputs; 4-band EQ on stereo inputs

Channel Inserts and Direct Outputs on each mono channel plus Main Insert for flexible connection of outboard equipment

24-bit internal DSP with 256 effects, 16 presets by 16 variations with DSP Mute switch and Peak LED

2-TRACK IN assignable to Main Mix, Control Room/Headphone outputs

With USB port








LYNX-MIX164 USB



LYNX-mix164 USB
164-CHANNEL MIXER WITH DIGITAL EFFECTS

- 24-BITS DIGITAL STEREO EFFECTS PROCESSOR**
- 1. VOCAL 3
 - 2. SPRING REVERB
 - 3. REVERB
 - 4. SMALL HALL
 - 5. STAIRS REVERB
 - 6. SMALL ROOM
 - 7. TAPE REVERB
 - 8. TAPE REVERB
 - 9. REVERB
 - 10. CHORUS
 - 11. PHASER
 - 12. FLANGER
 - 13. DELAY
 - 14. REVERB
 - 15. REVERB
 - 16. CHORUS

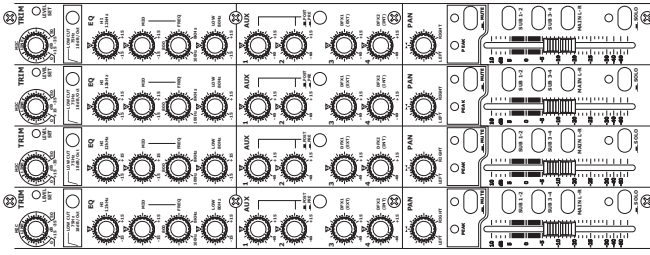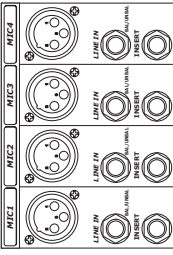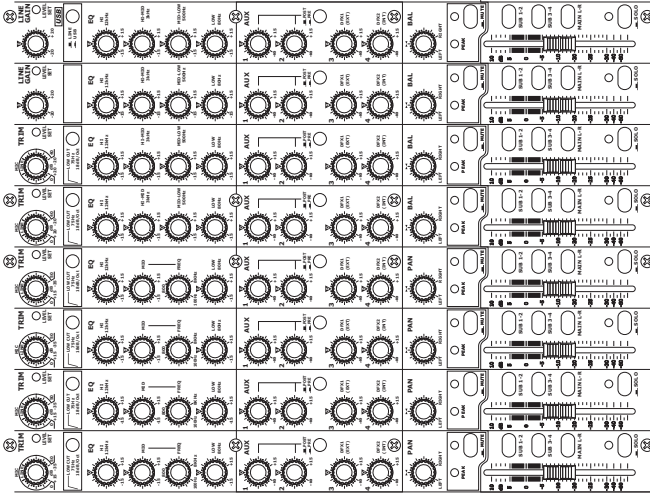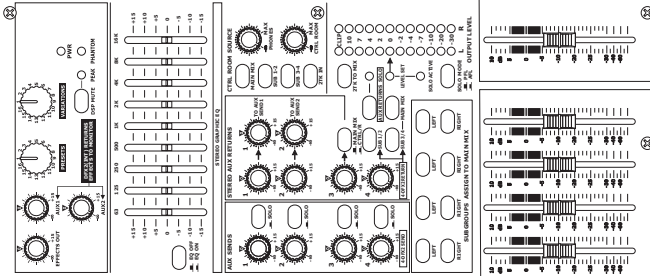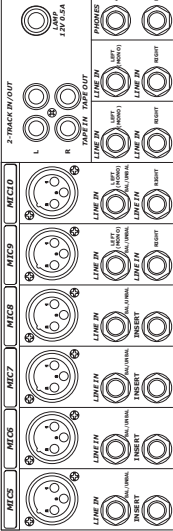

LYNX-MIX204 USB

LTO
LYNX-MIX204
USB

2-BIT DUAL CHANNEL D/A CONVERTER

1. VOCAL 1
2. VOCAL 2
3. VOCAL 3
4. VOCAL 4
5. VOCAL 5
6. VOCAL 6
7. VOCAL 7
8. VOCAL 8
9. SINGING REVERB
10. SINGING REVERB
11. SINGING REVERB
12. SINGING REVERB
13. SINGING REVERB
14. SINGING REVERB
15. SINGING REVERB
16. SINGING REVERB
17. SINGING REVERB
18. SINGING REVERB
19. SINGING REVERB
20. SINGING REVERB
21. SINGING REVERB
22. SINGING REVERB
23. SINGING REVERB
24. SINGING REVERB
25. SINGING REVERB
26. SINGING REVERB
27. SINGING REVERB
28. SINGING REVERB
29. SINGING REVERB
30. SINGING REVERB
31. SINGING REVERB
32. SINGING REVERB
33. SINGING REVERB
34. SINGING REVERB
35. SINGING REVERB
36. SINGING REVERB
37. SINGING REVERB
38. SINGING REVERB
39. SINGING REVERB
40. SINGING REVERB
41. SINGING REVERB
42. SINGING REVERB
43. SINGING REVERB
44. SINGING REVERB
45. SINGING REVERB
46. SINGING REVERB
47. SINGING REVERB
48. SINGING REVERB
49. SINGING REVERB
50. SINGING REVERB
51. SINGING REVERB
52. SINGING REVERB
53. SINGING REVERB
54. SINGING REVERB
55. SINGING REVERB
56. SINGING REVERB
57. SINGING REVERB
58. SINGING REVERB
59. SINGING REVERB
60. SINGING REVERB
61. SINGING REVERB
62. SINGING REVERB
63. SINGING REVERB
64. SINGING REVERB
65. SINGING REVERB
66. SINGING REVERB
67. SINGING REVERB
68. SINGING REVERB
69. SINGING REVERB
70. SINGING REVERB
71. SINGING REVERB
72. SINGING REVERB
73. SINGING REVERB
74. SINGING REVERB
75. SINGING REVERB
76. SINGING REVERB
77. SINGING REVERB
78. SINGING REVERB
79. SINGING REVERB
80. SINGING REVERB
81. SINGING REVERB
82. SINGING REVERB
83. SINGING REVERB
84. SINGING REVERB
85. SINGING REVERB
86. SINGING REVERB
87. SINGING REVERB
88. SINGING REVERB
89. SINGING REVERB
90. SINGING REVERB
91. SINGING REVERB
92. SINGING REVERB
93. SINGING REVERB
94. SINGING REVERB
95. SINGING REVERB
96. SINGING REVERB
97. SINGING REVERB
98. SINGING REVERB
99. SINGING REVERB
100. SINGING REVERB
101. SINGING REVERB
102. SINGING REVERB
103. SINGING REVERB
104. SINGING REVERB
105. SINGING REVERB
106. SINGING REVERB
107. SINGING REVERB
108. SINGING REVERB
109. SINGING REVERB
110. SINGING REVERB
111. SINGING REVERB
112. SINGING REVERB
113. SINGING REVERB
114. SINGING REVERB
115. SINGING REVERB
116. SINGING REVERB
117. SINGING REVERB
118. SINGING REVERB
119. SINGING REVERB
120. SINGING REVERB
121. SINGING REVERB
122. SINGING REVERB
123. SINGING REVERB
124. SINGING REVERB
125. SINGING REVERB
126. SINGING REVERB
127. SINGING REVERB
128. SINGING REVERB
129. SINGING REVERB
130. SINGING REVERB
131. SINGING REVERB
132. SINGING REVERB
133. SINGING REVERB
134. SINGING REVERB
135. SINGING REVERB
136. SINGING REVERB
137. SINGING REVERB
138. SINGING REVERB
139. SINGING REVERB
140. SINGING REVERB
141. SINGING REVERB
142. SINGING REVERB
143. SINGING REVERB
144. SINGING REVERB
145. SINGING REVERB
146. SINGING REVERB
147. SINGING REVERB
148. SINGING REVERB
149. SINGING REVERB
150. SINGING REVERB
151. SINGING REVERB
152. SINGING REVERB
153. SINGING REVERB
154. SINGING REVERB
155. SINGING REVERB
156. SINGING REVERB
157. SINGING REVERB
158. SINGING REVERB
159. SINGING REVERB
160. SINGING REVERB
161. SINGING REVERB
162. SINGING REVERB
163. SINGING REVERB
164. SINGING REVERB
165. SINGING REVERB
166. SINGING REVERB
167. SINGING REVERB
168. SINGING REVERB
169. SINGING REVERB
170. SINGING REVERB
171. SINGING REVERB
172. SINGING REVERB
173. SINGING REVERB
174. SINGING REVERB
175. SINGING REVERB
176. SINGING REVERB
177. SINGING REVERB
178. SINGING REVERB
179. SINGING REVERB
180. SINGING REVERB
181. SINGING REVERB
182. SINGING REVERB
183. SINGING REVERB
184. SINGING REVERB
185. SINGING REVERB
186. SINGING REVERB
187. SINGING REVERB
188. SINGING REVERB
189. SINGING REVERB
190. SINGING REVERB
191. SINGING REVERB
192. SINGING REVERB
193. SINGING REVERB
194. SINGING REVERB
195. SINGING REVERB
196. SINGING REVERB
197. SINGING REVERB
198. SINGING REVERB
199. SINGING REVERB
200. SINGING REVERB
201. SINGING REVERB
202. SINGING REVERB
203. SINGING REVERB
204. SINGING REVERB

2-TRACK INPUT

1. TRACK 1
2. TRACK 2

MIC1

MIC2

MIC3

MIC4

MIC5

MIC6

MIC7

MIC8

TECH

EQ

COMP

REVERB

FX

10

11

12

13/14

15/16

17/18

19/20

SUB1

SUB2


SUB3

SUB4

MULTI MIX LEVEL

4

LYNX-MIX244 USB

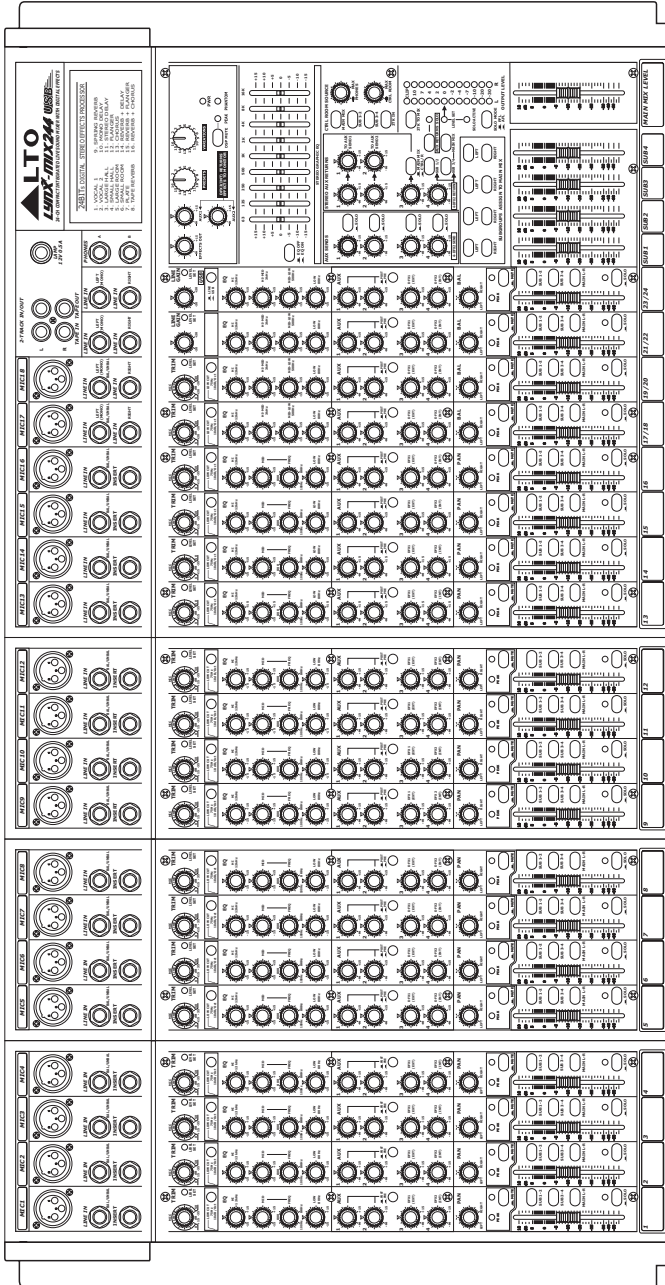


3. QUICK START

This is the fastest way to get something out from your LYNX-MIX USB series, if you have a keyboard and a microphone.

- a. Plug the microphone into Channel 1 MIC IN.
- b. Turn down AUX and LEVEL controls on the input channel.
- c. Put the EQ controls on center position.
- d. Turn on your LYNX-MIX USB mixer.
- e. Sing or speak into the microphone with normal volume and adjust the channel LEVEL control to half.
- f. If you like, you can adjust the EQ at this stage.
- g. The LED on the Master LED meter should flash only occasionally, otherwise you will hear distortion. If this LED is not active and you still hear distortion, please turn down a little the input LEVEL control or reduce the output level of your source instrument.
- h. Connect your stereo keyboard into one of the stereo line inputs channel of your LYNX-MIX USB mixer.

Here you are. It is your first GIG with your LYNX-MIX USB series.


LARGE GIG HOOKUP DIAGRAM

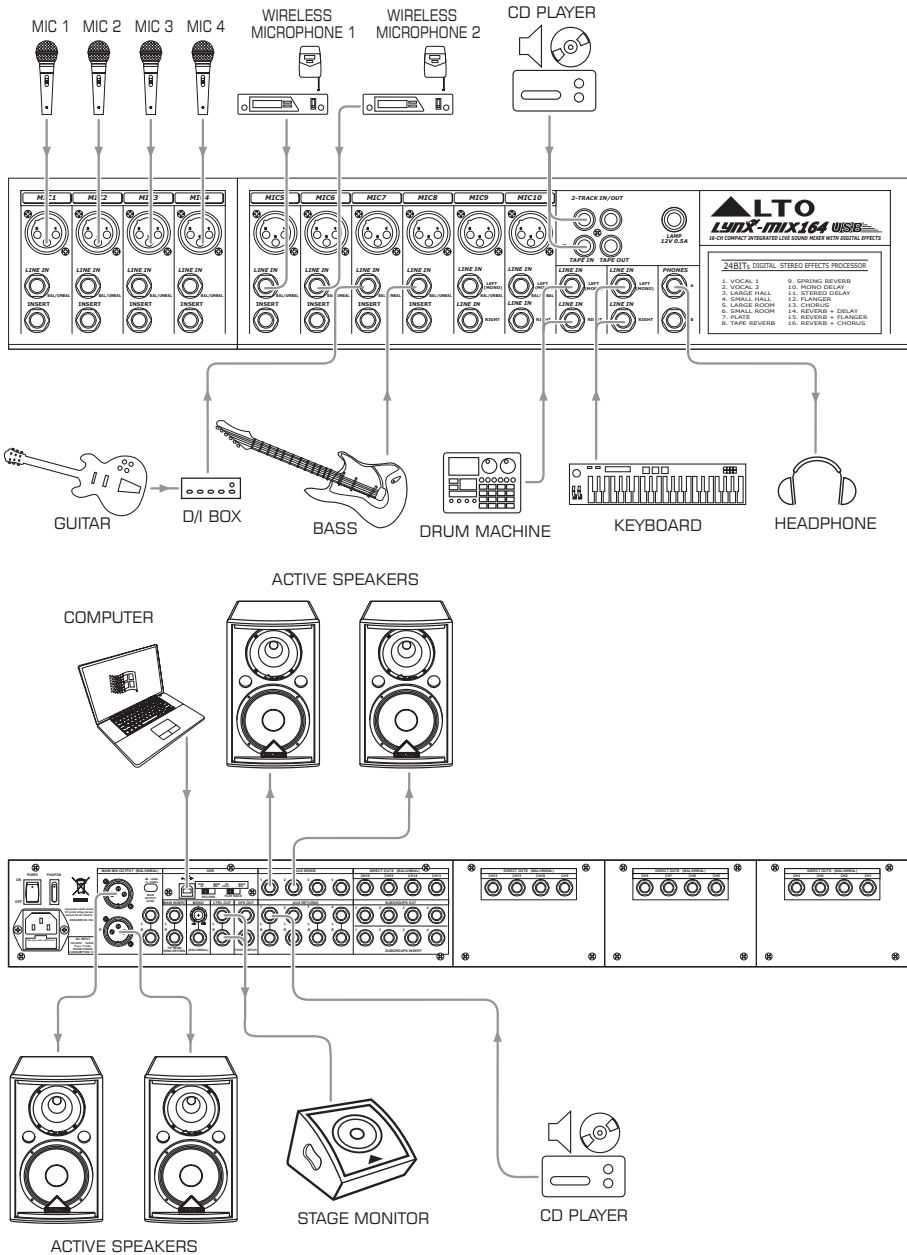

4. CONTROL ELEMENTS

1 MONO MIC/LINE Channels

Your LYNX-MIX124 USB is equipped with 4 (8 for LYNX-MIX164 USB, 12 for LYNX-MIX204 USB, 16 for LYNX-MIX244 USB) low-noise microphone preamplifier with optional phantom power, 50 dB of Gain and over 115 dB of S/N ratio. You can connect almost any type of microphone. Dynamic microphones do not need phantom power. Use phantom power only with condenser microphones but make sure that the phantom power button is disengaged before connecting the microphone. Phantom power will not damage your dynamic microphones, so make sure to read the MIC instructions manual before engaging phantom power. Use switch (48) to activate/deactivate phantom power. These channels are also equipped with 1/4" TRS balanced/unbalanced LINE-IN plugs to connect line-level instruments such as keyboards, drum machines and effect devices.

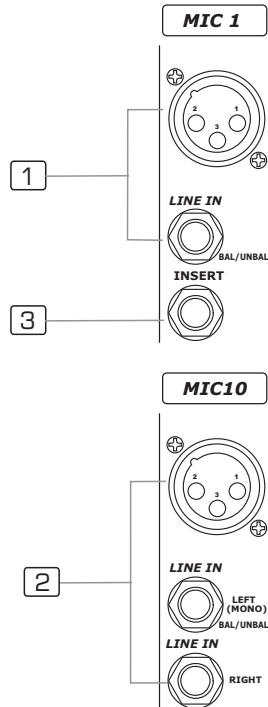

2 STEREO INPUTS

These are channels 5 through 12 (9 through 16 for LYNX-MIX164 USB, 13 through 20 for LYNX-MIX204 USB, 17 through 24 for LYNX-MIX244 USB). They are organised in stereo pair and provided with XLR sockets (channels 5/6 for LYNX-MIX124 USB, 9/10 for LYNX-MIX164 USB, 13/14 for LYNX-MIX204 USB) and 1/4" TRS phone jacks. If you connect only the left jack, the input will operate in mono mode, that is the mono signal will appear on both input channels. You can use these inputs with a stereo keyboard, drum machine, etc.

3 MONO Channel INSERT

This is where you connect external sound processors such as compressor-limiter, equalizers, etc.. The insert point is available on the first 4 (8 for LYNX-MIX164 USB, 12 for LYNX-MIX204 USB, 16 for LYNX-MIX244 USB) MIC channels only.


4 TRIM

The TRIM control is applied in the mono MIC and stereo input channels. It provides with 2 different indications: One is for the MIC and the other for LINE levels. When you use a microphone, you shall read the MIC ring (0~50 for mono MIC input, 0~40 for stereo channels); when you use a line level




4. CONTROL ELEMENTS

instrument, you shall read the LINE ring (+15~-35 dB for mono MIC input, +20 ~-20 dB for stereo channels). For optimum operation, you shall set this control in a way that the PEAK LED(16) blinks only occasionally in order to avoid distortion on the input channel.

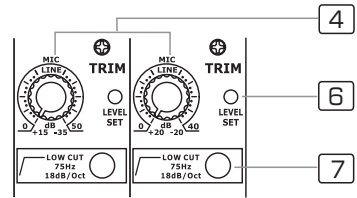

5 LINE GAIN

When you use a line level instrument, you shall read the ring (-20~+20 dB). For optimum operation, you shall set this control in a way that the PEAK LED (16) blinks only occasionally in order to avoid distortion on the input channel.

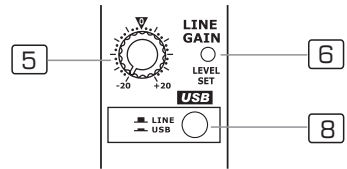

6 LEVEL SET LED

This LED will help you to detect the input level immediately. In this case, the research of the fault will become much faster!

7 LOW-CUT Button

By pressing this button, you will activate a 75 Hz low frequency filter with a slope of 18 dB per octave. You can use this facility to reduce the hum noise infected by the mains power supply, or the stage rumble while using a microphone.

8 LINE/USB Button

By pressing this button, it will switch to the USB mode, then the USB signal can be sent to this channel or the Main Mix channel; by releasing this button, the LINE IN inputs signal will send to the line input channels.

EQUALISER

There are 3-band EQ with sweepable MID on all mono input channel1-4 (1-8 for LYNX-MIX164 USB, 1-12 for LYNX-MIX204 USB,1-16 for LYNX-MIX244 USB): HI, MID and LOW band. There are 4-band fixed frequency EQ on the stereo channel 5-12 (9-16 for LYNX-MIX164 USB, 13-20 for LYNX-MIX204 USB,17-24 for LYNX-MIX244 USB): HI, HI-MID, MID-LOW and LOW band. All bands provide up to 15 dB of boost or cut.

9 HI

If you turn this control up, you will boost all the frequencies above 12 kHz (shelving filter). You will add transparency to vocals and guitar and also make cymbals crispier.Turn the control down to cut all frequencies above 12 kHz. In such way, you can reduce sibilances of human voice or reduce the hiss of a Tape player.



4. CONTROL ELEMENTS

10 MID

This is a peaking filter and it will boost/cut frequencies from 100 Hz to 8 kHz depending on the position of the MID freq control. This control will affect especially upper male and lower female vocal ranges and also the harmonics of most musical instruments.

11 HI-MID

This control gives you up to 15 dB boost or cut at 3 kHz. It is useful for controlling voice. It can accurately polish your performance via adjusting this knob.

12 MID-LOW

This control gives you up to 15 dB boost or cut at 500 Hz.

13 LOW


If you turn this control up, you will boost all frequencies below 80 Hz. You will give more punch to bass drum and bass guitar and make the vocalist more "macho". Turn it down, you will cut all the frequencies below 80 Hz. In this way, you can avoid lowfrequency vibrations and resonance thus preserving the life of your woofers.

14 AUX SENDS Level Control

These four controls are used to adjust the level of the respective signal sent to AUX bus, AUX1 and AUX2 can be switched to PRE/POST-FADER via the PRE/POST button, so, generally, they can be used for monitor application and effects & sound processors input. AUX3 and AUX4 are configured as POST-Faders. In this typical compact unit, excluding sending out the signal directly to the external effect or processor equipment, AUX SEND4 can also be assigned to the internal onboard effect module.

15 PAN/BAL Control

Abbreviation of PANORAMA control for mono channels, or the stereo channels, always says, BALANCE control. Keep this control in center position, then the signal will be positioned in the middle of stage.

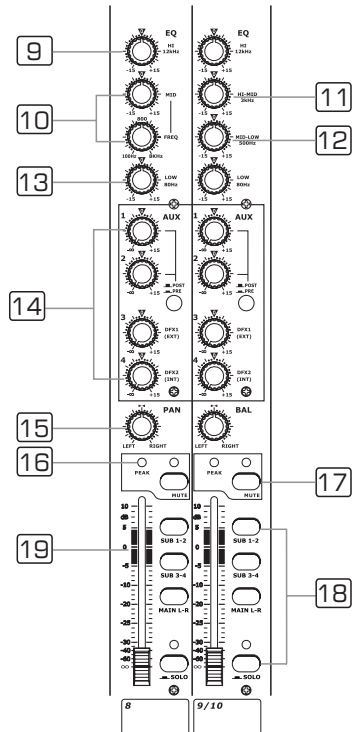



4. CONTROL ELEMENTS

16 PEAK LED

Inside your LYNX-MIX USB mixer, the audio signal is monitored in several different stages and then sent to the PEAK LED. When the LED is red illuminated, it warns you that you are reaching signal saturation and possible distortion, then you should reduce the input level for avoiding distortion.

17 MUTE Button & LED

Each channel is equipped with a MUTE button. Pressing this button is equal to turning the fader down, which can mute the corresponding channel output except for the channel INSERT send and SOLO (in PFL mode). And the MUTE LED will illuminate.

18 ASSIGNMENT Controls

Each channel provides four push-buttons: SUB1-2, SUB3-4, MAIN L-R and SOLO. Pressing the SOLO button, the corresponding SOLO LED will illuminate and the SOLO signal will replace other signals send to the Headphone/Control Room and Meters. Usually use the SOLO function in live work to preview channels before they are let into the mix. It is useful to set an instrument's input level and EQ, and you can also solo any channel that you want to. The SOLO switch never affects any mix other than the Control Room. The other three buttons can be considered as signal assignment switches. Pressing the SUB1-2 will assign the channel signal to Subgroup1/2, you can depend on the PAN switch to adjust the amount of channel signal sent to the SUB1 versus SUB2, when turns the PAN to completely left, then the signal can be only controlled by Subgroup1 and viceversa. In the same way, pressing the SUB3-4 or MAIN L/R will assign the channel signal to Subgroup3/4 or MAIN MIX L/R, and will also be affected by PAN.

19 FADER

This fader will adjust the overall level of this channel and set the amount of signal send to the main output.

20 Control Room Source

You can choose to monitor any combination of MAIN MIX, SUB1-2, SUB 3-4 and 2TK IN via these Matrix switches. Engaging these switches, the stereo signals will be delivered to the Phones, Control Room and Meters display.

※NOTE: When any SOLO switch was engaged, the SOLO signal will replace other signals, and also be sent to the Control Room, Phones and Meters.

21 PHONES/CTRL ROOM Controls

Rotate these knobs to adjust the stereo level of CTRL ROOM and PHONES outputs separately, which can be varied from $-\infty$ to MAX.



4. CONTROL ELEMENTS

22 Master AUX SENDS Controls

These four controls are used to determine the master AUX SEND levels, which can be varied from $-\infty$ to +15 dB. When the external effect units which have no input gain control were connected to mixer, you can get a further +15 dB gain available from these Aux Send outputs. As to the AUX4, it can also provide the lovable level adjustment for the internal effect signal.

23 SOLO Button

The function of these SOLO buttons are the same as the channel SOLO button, they can also be affected by the SOLO MODE switch. Press the SOLO button, the corresponding AUX send will be routed to the Ctrl Room/Phones outputs and Meters display.

24 Master STEREO AUX RETURNS Controls


These four controls set the level of effects that received from the stereo AUX RETURN connectors, which can be varied from $-\infty$ to +15 dB. They are used to provide the further gain for low level effects.

25 TO AUX SEND1/2

The both rotary knobs assign the AUX RETURN signals to their respective AUX SEND outputs: The "TO AUX SEND1" assign the signal from AUX RETURN1 to AUX SEND1 bus, and "TO AUX SEND2" assign the signal from AUX RETURN2 to AUX SEND2 bus. The adjustable range goes from $-\infty$ to +15 dB.

26 MAIN MIX & CTRL/R Button

AUX RETURN3 is equipped with the Main Mix & Ctrl/R button. Release the button to send the stereo signal from AUX RETURN3 to MAIN MIX buses; Engage the button, then the stereo signal will be sent to CTRL/R output.

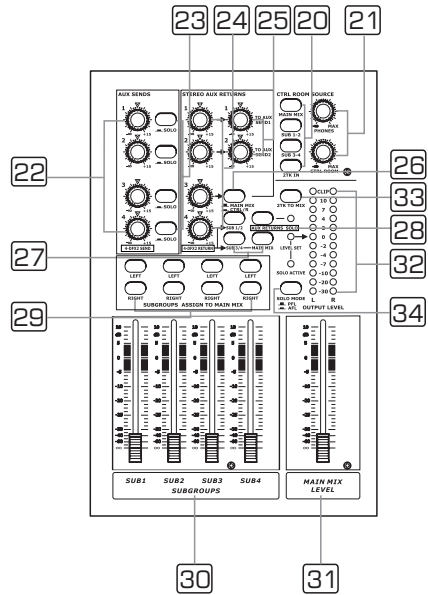



4. CONTROL ELEMENTS

27 SUB1-2/SUB3-4/MAIN MIX Buttons

These three buttons are configured for AUX RETURN4, they can be regarded as the signal assignment switches. When engaging the SUB1-2, the stereo signal from AUX RETURN4 will be assigned to Subgroup1/2; in the same way, SUB3-4 for Subgroup3/4, MAIN MIX for MAIN MIX buses.

28 AUX RETURNS SOLO Button

The function of AUX RETURN SOLO is like the channel SOLO button. Engaging it sends the signal from AUX RETURN (1-4) to the CTRL OUT, PHONES outputs and Meters display. It can also be affected by SOLO mode button, and the LED next to the button will illuminate.

29 SUBGROUPS ASSIGN TO MAIN MIX

Through these switches, you can operate the subgroup faders as a master control for assigning the subgroups to MAIN MIX. Engage the LEFT switch to send the corresponding subgroup signal to MAIN MIX L, and the RIGHT switch for MAIN MIX R. When engaging the both switches, the signal will be sent to L/R of MAIN MIX.

30 SUBGROUPS Fader

These faders are used to control the levels of the signal send to the SUBGROUPS OUT, the adjustable range goes from $-\infty$ to +10 dB. Any channel that is assigned to the subgroups, not muted and not turned down will be assigned to the SUB OUTS.

31 MAIN MIX LEVEL Fader

This fader sets the amount of signal send either to the Main Mix Output or to the Tape Output.

32 LED Meter

The stereo 12-segment LED Meter will indicate the signal level send to the Ctrl Room and Phones outputs.

33 2TK TO MIX Button

Engaging this switch allows you to combine the 2-Track output with the Main Mix. In other words, feeds the 2-Track In signals into Main L/R output.

34 SOLO MODE Button

This button provides two modes: up for PFL (Pre-Fader-Listen) mode, down for AFL (After-Fader-Listen) mode. Engage the button, the soloed signal will output after the Level control, otherwise, release the button will output the



4. CONTROL ELEMENTS

soloed signal before the Level control.


※NOTE: The SOLO function can never affect the mix at main recording output, and also can't be affected by channel's MUTE switch.

35 EQ Switch

Engage this button to add the stereo graphic EQ to the main mix output circuit. It can be used to modify the frequency "contour" of a sound. If you release the button, the stereo graphic EQ will be bypassed.

36 STEREO GRAPHIC EQ

Each one of these faders will boost or attenuate (+/-15 dB) the selected frequency at a preset bandwidth. When all the faders are in the center position, the output of the equalizer is flat response.

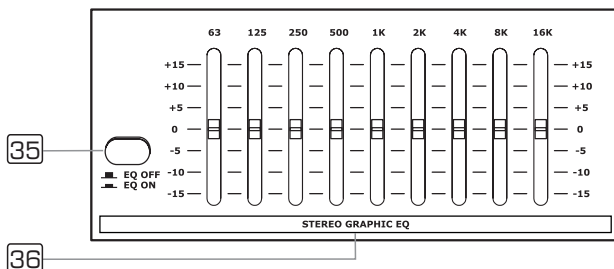

DSP SECTION

There is a powerful 24-bit/256 preset multi-effects included in your LYNX-MIX USB Series. Effects include reverbs, chorus, flanger, delay and combinations of the above.

37 PRESETS

Adjust this knob to select the right effect you wish to perform. There are a total of 16 options for you: several kinds of reverb, mono and stereo delay, effects with modulation, and versatile two-effect combination.

38 VARIATIONS


Since you have selected the preferable effect, the next step, please go with the fine consideration, there are also a total of 16 variations for each preset, and each variation may be managed by several different factors.



4. CONTROL ELEMENTS

39 DSP MUTE Switch & PEAK LED

This switch is used to activate/deactivate the effect facility. This LED lights up when the input signal is too strong. In case of the digital effect module being muted, this LED also lights up.

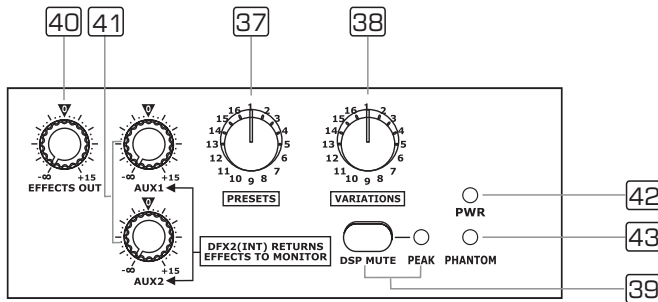

40 EFFECTS OUT Control

Rotate this knob to adjust the level of effect signal that intercepted from internal DSP processor and directly sent to DFX OUT, which can be varied from $-\infty$ to +15 dB.

41 DFX2 (INT) RETURN EFFECTS TO MONITOR

The AUX1 and AUX2 controls are used to set the signal level from AUX RETURN4, which signal will be sent to AUX SEND1 and AUX SEND2. The adjustable range can be varied from $-\infty$ to +15 dB.

42 POWER LED

The LED indicates when the power is ON.

43 PHANTOM LED

This LED indicates when the phantom power is switched on.


44 2-TRACK IN/OUT

-TAPE IN

Use the Tape input if you wish to listen to your mix from a Tape Recorder or DAT.

- TAPE OUT

These RCA jacks will route the main mix into a tape recorder.

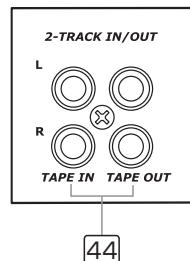




4. CONTROL ELEMENTS

45 PHONES Jacks


These jacks will be used to send the signal to a pair of headphone or to powered studio monitors.

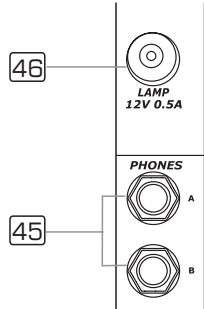

46 LAMP socket

This lovable LAMP is very convenient for your operation, it is located in the top right corner of the front panel, and provides the 12V socket that can drive standard BNC-type lamp.

REAR PANEL

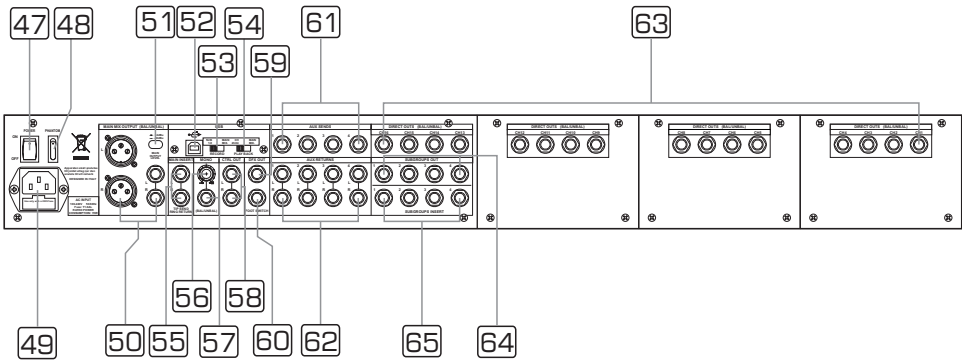

47 POWER Switch

This switch is used to turn the main power on and off.

48 +48 Volt Phantom Power

It is available only to the XLR MIC sockets. Never plug in a microphone when phantom power is already on. Before turning phantom power on, make sure that all faders are totally down. In this way, you will protect your stage monitors and main loudspeakers.

49 AC Inlet with FUSE Holder

Use it to connect your LYNX-MIX USB mixer to the main AC with the supplied AC cord. Please check the voltage available in your country and how the voltage for your LYNX-MIX USB mixer is configured before attempting to connect your LYNX-MIX USB mixer to the main AC.



4. CONTROL ELEMENTS

50 MAIN MIX OUTPUT

These stereo outputs are supplied with both the XLR and 1/4" phone jacks and it is controlled by the Main Mix Level.

51 MAIN OUTPUT LEVEL Button

This button sets the main mix output level to match the input of the device that you are ready to connect. Engage this button to reduce the output level from MAIN MIX OUTPUT by 30 dBu, it is used to match the semipro -30 dBu device, on the contrary, to match the professional +4 dBu device.

52 USB PORT

This USB port is used to connect the unit to PC with a transmission line. When it is in output mode, it can connect with the SUB1-2 or MAIN MIX output; in the input mode, it can connect with the CH11/12 (for LYNX-MIX 124 USB, CH15/16 for LYNX-MIX164 USB, CH19/20 for LYNX-MIX204 USB, CH23/24 for LYNX-MIX244 USB) or MAIN MIX output.

53 USB RECORD Switch

You can select SUB1/2 or MAIN MIX track to input the record signal to PC.

54 USB PLAYBACK Switch

You can select CH11/12 (CH15/16 for LYNX-MIX164 USB, CH19/20 FOR LYNX-MIX204 USB, CH23/24 for LYNX-MIX244 USB) or MAIN MIX track to output the audio signal from PC.

55 MAIN INSERT

These two 1/4" phone jacks are stereo insert points and used to connect processors such as compressors, equalisers etc.. When insert a external processor into the jack, the Main stereo signal will be taken out after the EQ and returned into the MAIN MIX output before the MAIN MIX fader.

56 MONO Level Control

This knob sets the level of mono mix output signal, which can be varied from $-\infty$ to +15 dB.

57 MONO OUTPUT Jack

This 1/4" phone jack is balanced/unbalanced mono mix output connector, it can be regarded as a sum output of the left and right of MAIN MIX.

58 CTRL OUT Jacks

These 1/4" phone jacks will be used to send the Control Room signal to the studio monitor speakers or a second set of PA.



4. CONTROL ELEMENTS

59 DFX OUT Jack

This 1/4" phone jack is used to output the effect signal that comes from internal DSP module and the signal level can be controlled by the EFFECTS OUT(40) control.

60 FOOTSWITCH Jack

This 1/4" phone jack can be used to connect an external footswitch to turn on/off the onboard effect module.

61 AUX SENDS Jacks

These 1/4" phone jacks are used to send out the signal from the AUX Bus to external devices such as effect units and/or stage monitors.

62 AUX RETURNS Jacks

Use these stereo 1/4" phone jacks to return the stereo signal of an effect unit to the Main Mix. Alternatively you can also use them as an extra auxiliary input via using the AUX RETURN level control as volume control. The signal will be sent directly to MAIN MIX control.

63 DIRECT OUTS

Each Mono MIC/LINE Channel (CH1-CH4 for LYNX-MIX124 USB, CH1-CH8 for LYNX-MIX164 USB, CH1-12 for LYNX-MIX204 USB, CH1-16 for LYNX-MIX244 USB) is equipped with the 1/4" phone jack for directing output. These jacks are used to send the signal from the channel path to external device for recording function etc..

64 SUBGROUPS OUT Jacks

These 1/4" phone jacks are used to connect the inputs of deck or secondary in a complicated PA live sound system. You will find it is the best tool when you operate the SUBGROUPS OUT.

65 SUBGROUPS INSERT

These 1/4" phone jacks are insert points. They are used to connect processors, such as compressor, limiter, EQ etc.. When insert external processor into these jacks, the subgroup stereo signal will be taken out, then returned to before subgroups fader. Of course, these used jacks must be stereo (Tip Send/Ring Return).




5. INSTALLATION AND CONNECTION

Ok, you have got to this point and you are now in the position to successfully operate your LYNX-MIX USB series. However, we advise you to read the following section carefully to be the real master of your own mix. Not paying enough attention to the input signal level, the routing of the signal and the assignment of the signal will result in unwanted distortion, a corrupted signal or no sound at all. So you should follow this procedure for every single channel:

1. Turn down all input and output gain controls.
2. Connect phantom powered microphones before switching on the +48 Volt phantom power switch.
3. Set the output level of your LYNX-MIX USB mixer or the connected power amplifier at no more than 75%.
4. Now, set the CONTROL ROOM/PHONES level at no more than 50%. In this way, you will be able to hear later what you are doing connecting a pair of headphones or a pair of powered studio monitor speakers.
5. Position EQ controls on middle position.
6. Position panoramic (PAN/BAL) control on center position.
7. With a pair of headphone or studio monitor speakers are connected, apply a Line Level input signal so that the PEAK LED does not light up.
8. Increase the input gain properly for maintaining the good headroom and ideal dynamic range.
9. Depending on the actual application, turn slowly the input and output level controls for obtaining the maximum gain before distortion.
10. Now repeat the same sequence for all input channels. The main LED meter could move up into the red section. In this case you can adjust the overall output level through the main mix control.




Audio Connections

You can connect unbalanced equipment to balanced inputs and outputs. Simply follow these schematics.

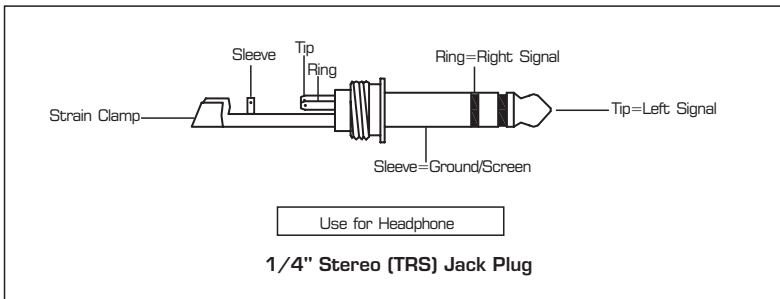




5. INSTALLATION AND CONNECTION

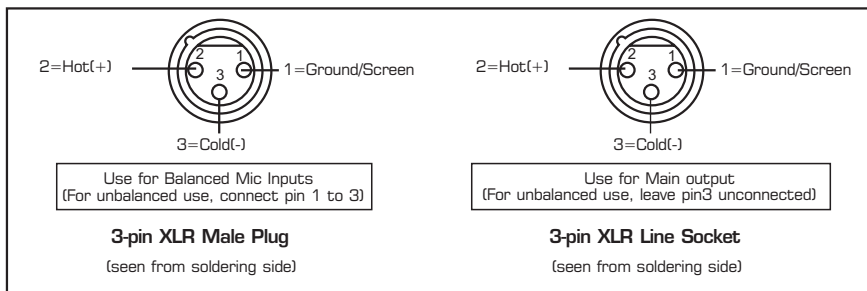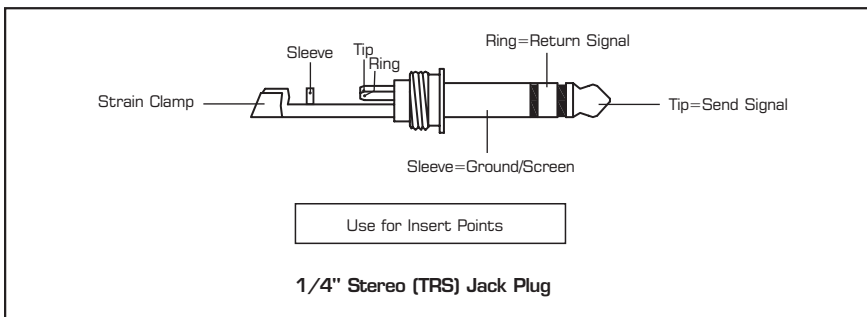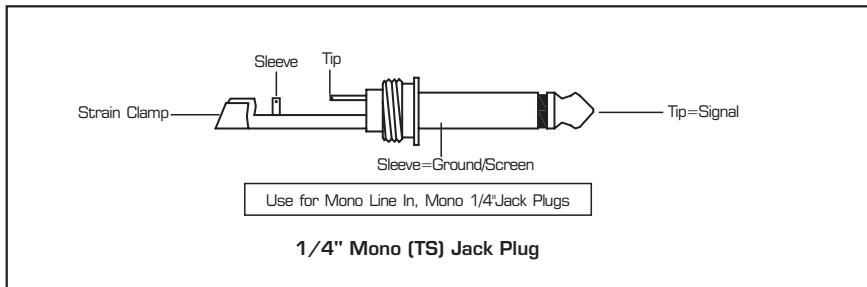




5. INSTALLATION AND CONNECTION

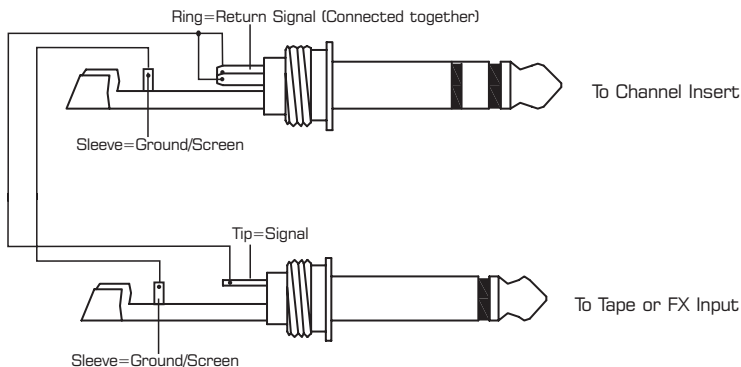

'Tapped' Connection Direct Output Lead
 (Enables the Insert to be used as a Direct Output while maintaining the channel signal flow)

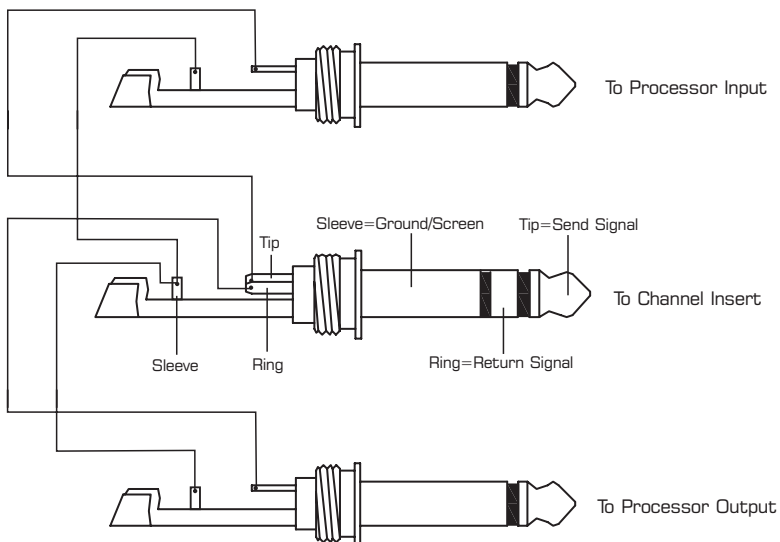

Y-Stereo lead for insert Connection
 (To be used when the processor does not employ a single jack connection for the In/Out Connections)


USB Connection



6. PRESET LIST

NO.	Preset	Description	Controllable Parameter	
			Parameter	Variable range
1	VOCAL1	Simulate a room with small delay time	Decay time Pre-delay	0.8~1.1s 0~79ms
2	VOCAL2	Simulate a small space with slight decay time	Decay time Pre-delay	0.8~2.5s 0~79ms
3	LARGE HALL	Simulate a large acoustic space of the sound	Decay time Pre-delay	3.6~5.4s 23~55ms
4	SMALL HALL	Simulate a small acoustic space of the sound	Decay time Pre-delay	1.0~2.9s 20~45ms
5	LARGE ROOM	Simulate a studio room with many early reflections	Decay time Pre-delay	2.9~4.5s 23~55ms
6	SMALL ROOM	Simulate a bright studio room	Decay time Pre-delay	0.7~2.1s 20~45ms
7	PLATE	Simulate the transducers sound like classic bright vocal plate	Decay time Pre-delay	0.6~6.1s 10ms
8	TAPE REVERB	Simulate a record head and multiple playback heads at intervals along the tape	Decay time Pre-delay	1.3~5.4s 0~84ms
9	SPRING REVERB	Simulate the analog transducers' springs lightly stretched sound	Decay time Pre-delay	1.3~5.4s 0~35ms
10	MONO DELAY	Reproduce the sound input on the output after a lapse of time	Period	60~650ms
11	STEREO DELAY	Recreate the input sound on the stereo output with different time.	Period Feedback	210~400ms 37~73%
12	FLANGER	Simulate to play with another person carrying out same the notes on the same instrument	Rate	0.16~2.79Hz
13	CHORUS	Recreate the illusion of more than one instrument from a single instrument sound	Rate	0.5~5Hz
14	REV.+DELAY	Delay with room effect	Decay period Rev.decay time	211~375ms 1.0~2.9s
15	REV.+FLANGER	Stereo flanger and large room reverb	Flanger Rate Rev.decay time	0.16~2.52Hz 1.5~2.9s
16	REV.+CHORUS	Stereo chorus and large room reverb	Chorus rate Rev.decay time	0.5~4.74Hz 1.5~2.9s

7. BLOCK DIAGRAM

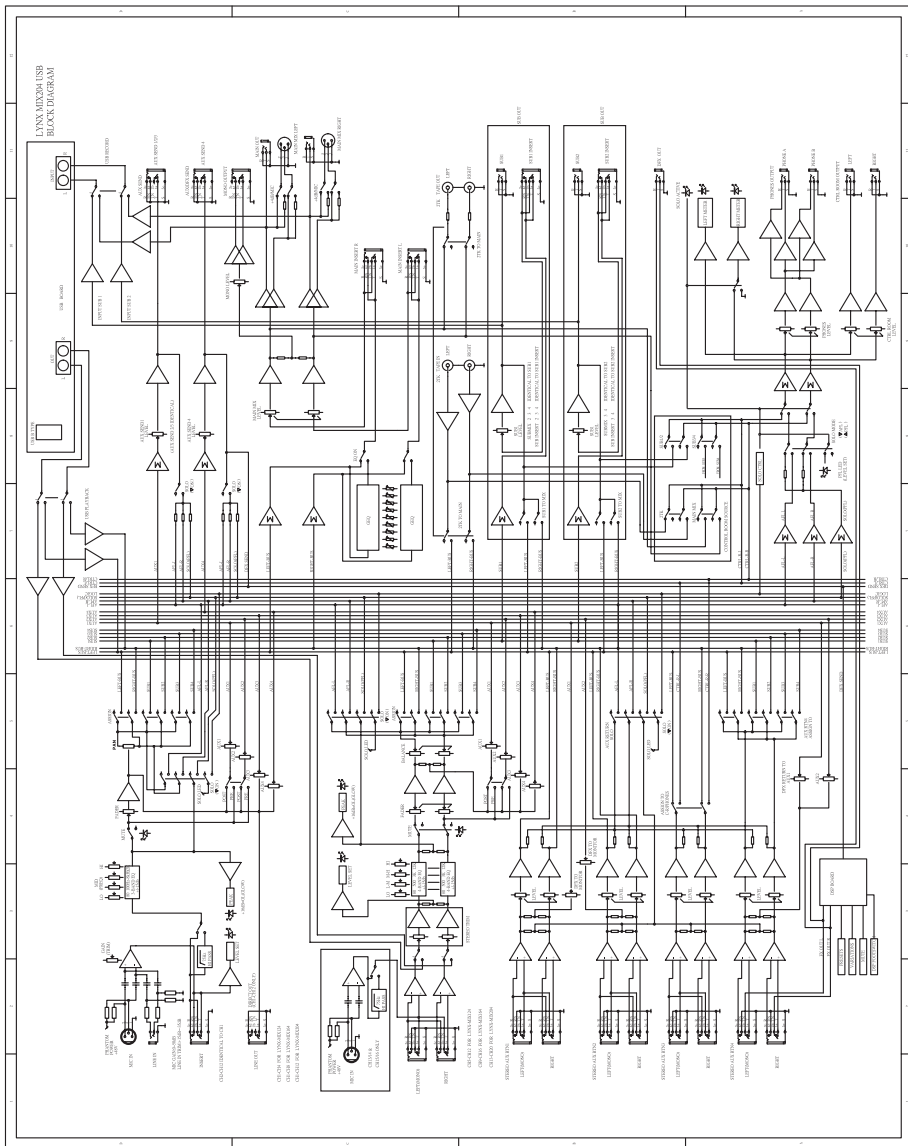

8. TECHNICAL SPECIFICATION

Mono Input Channels

Microphone Input	Electronically balanced, discrete input configuration
Frequency Response	10 Hz to 55 kHz, +/-3 dB
Distortion (THD & N)	0.005% at +4 dBu, 1 kHz
Gain Range	0 dB to 50 dB (MIC)
SNR (Signal to Noise Ratio)	115 dB
Line Input	Electronically balanced
Frequency Response	10 Hz to 55 kHz, +/-3 dB
Distortion (THD & N)	0.005% at +4 dBu, 1 kHz
Sensitivity Range	+15 dBu to -35 dBu

Stereo Input Channels

Line Input	Balanced/Unbalanced
Frequency Response	10 Hz to 55 kHz, +/-3 dB
Distortion (THD & N)	0.005% at +4 dBu, 1 kHz

Impedances

Microphone Input	1.4 kOhm
Channel Insert Return	2.5 kOhm
All Other Inputs	10 kOhm or greater
Tape Out	1 kOhm
All Other Output	120 Ohm

Equalization

Hi-shelving	+/- 15 dB @12 kHz
Mid bell (Mono)	+/- 15 dB -frequency range 100 Hz~8 kHz
Hi-Mid (Stereo)	+/- 15 dB @ 3 kHz
Mid-Low (Stereo)	+/- 15 dB @ 500 Hz
Low-shelving	+/- 15 dB @ 80 Hz
Low Cut Filter	75 Hz, 18 dB/Oct.

DSP Section

A/D & D/A Converters	24-Bit
DSP Resolution	24-Bit
Type of Effects	Hall, Room, Vocal & Plate REVERBS Mono & Stereo DELAY (Max DELAY TIME 650ms) Chorus, Flanger & Reverb MODULATIONS REVERB+DELAY, REVERB+CHORUS, REVERB+FLANGER Combinations
Presets	256
Controls	16-Position PRESET Selector 16-Position VARIATION Selector DSP MUTE SWITCH with PEAK LED Indicator

Main Mix Section

Noise (Bus Noise)	Fader 0 dB, Channels Muted: -100 dB (ref.: +4 dBu) Fader 0 dB, all input channels assigned and set to UNITY Gain: -90 dB (ref.: +4 dBu)
Max Output	+22 dBu Balanced XLR +22 dBu Unbalanced, 1/4" jacks
AUX Returns Gain Range	-∞ to +15 dB
AUX Sends Max Out	+22 dBu

Power Supply

Main Voltage	USA/Canada	100-120 VAC~60 Hz
	Europe	210-240 VAC~ 50 Hz
	U.K./Australia	240 VAC~ 50 Hz
Power Consumption	LYNX-MIX124 USB	40 Watts
	LYNX-MIX164 USB	50 Watts
	LYNX-MIX204 USB	60 Watts
	LYNX-MIX244 USB	70 Watts

8. TECHNICAL SPECIFICATION

Fuse	LYNX-MIX124 USB	T1.25 AL
	LYNX-MIX164 USB	T1.25 AL
	LYNX-MIX204 USB	T1.6 AL
	LYNX-MIX244 USB	T1.6 AL
Main Connection	Standard IEC Receptacle	
Physical		
Dimension (WxDxH)		
LYNX-MIX124 USB	415 mmx400 mmx38/115 mm (16.34"x15.75"x1.49"/4.53")	
LYNX-MIX164 USB	525 mmx400 mmx38/115 mm (20.67"x15.75"x1.49"/4.53")	
LYNX-MIX204 USB	645 mmx400 mmx38/115 mm (25.39"x15.75"x1.49"/4.53")	
LYNX-MIX244 USB	765 mmx400 mmx38/115 mm (30.12"x15.75"x1.49"/4.53")	
Net Weight		
LYNX-MIX124 USB	5.80 Kg (12.8 lb)	
LYNX-MIX164 USB	7.40 Kg (16.3 lb)	
LYNX-MIX204 USB	9.00 Kg (19.8 lb)	
LYNX-MIX244 USB	10.6 Kg (23.4 lb)	

9. WARRANTY

1. WARRANTY REGISTRATION CARD

To obtain Warranty Service, the buyer should first fill out and return the enclosed Warranty Registration Card within 10 days of the Purchase Date.

All the information presented in this Warranty Registration Card gives the manufacturer a better understanding of the sales status, so as to provide a more effective and efficient after-sales warranty service. Please fill out all the information carefully and genuinely, miswriting or absence of this card will void your warranty service.

2. RETURN NOTICE

- 2.1 In case of return for any warranty service, please make sure that the product is well packed in its original shipping carton, and it can protect your unit from any other extra damage.
- 2.2 Please provide a copy of your sales receipt or other proof of purchase with the returned machine, and give detail information about your return address and contact telephone number.
- 2.3 A brief description of the defect will be appreciated.
- 2.4 Please prepay all the costs involved in the return shipping, handling and insurance.

3. TERMS AND CONDITIONS

- 3.1 ▲LTO warrants that this product will be free from any defects in materials and/or workmanship for a period of 1 year from the purchase date if you have completed the Warranty Registration Card in time.
- 3.2 The warranty service is only available to the original consumer, who purchased this product directly from the retail dealer, and it can not be transferred.
- 3.3 During the warranty service, ▲LTO may repair or replace this product at its own option at no charge to you for parts or for labor in accordance with the right side of this limited warranty.
- 3.4 This warranty does not apply to the damages to this product that occurred as the following conditions:
 - Instead of operating in accordance with the user's manual thoroughly, any abuse or misuse of this product.
 - Normal tear and wear.
 - The product has been altered or modified in any way.
 - Damage which may have been caused either directly or indirectly by another product / force / etc.
 - Abnormal service or repairing by anyone other than the qualified personnel or technician.

And in such cases, all the expenses will be charged to the buyer.

- 3.5 In no event shall ▲LTO be liable for any incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.
- 3.6 This warranty gives you the specific rights, and these rights are compatible with the state laws, you may also have other statutory rights that may vary from state to state.

SEIKAKU TECHNICAL GROUP LIMITED
NO. 1, Lane 17, Sec. 2, Han Shi West Road, Taichung 40151, Taiwan
<http://www.altoproaudio.com> Tel: 886-4-22313737
email: alto@altoproaudio.com Fax: 886-4-22346757

All rights reserved to ALTO. All features and content might be changed without prior notice. Any photocopy, translation, or reproduction of part of this manual without written permission is forbidden. Copyright ©2009 Seikaku Group